


How to replace drum unit for Brother HLL5000D HLL5100DN HLL5200DW HLL5200DWT HLL6200DW HLL6200DWT HLL6250DW


1. Make sure the machine is turned on and open the front cover.



2. Remove the toner and **drum** assembly from the machine.
3. Push down the green lock lever and take the toner out of the **drum**.
4. Unpack the new **drum** unit.
5. Insert the toner in the **drum**.

 *Make sure you put the toner cartridge in correctly or it may separate from the **drum** unit.*

6. Slide the green tab from left to right several times to clean the corona wire.

 *Be sure to return the tab to the Home position. If it isn't returned to the Home position, printed pages may have a vertical stripe.*

7. Install the **drum** and toner assembly in the machine. Do not close the front cover yet.
8. Press and hold **OK** for about two seconds to display **Drum Unit**. Press **OK**.
9. Press **▲**. The display will show **Accepted**.
10. Close the front cover.