

BROTHER® HL-L2300 SERIES TN630/660 TONER CARTRIDGE REMANUFACTURING INSTRUCTIONS

Visit us at the website below for video instruction.

www.tmtoner.com/guide



BROTHER TN660 TONER CARTRIDGE

REMANUFACTURING THE BROTHER HL-L2300 SERIES TN630/660 TONER CARTRIDGE



Released in July 2014, the Brother HL-L2300 printer engine is based on a new 27-32ppm, 1200 DPI laser engine. These machines have a first page out in less than 8.5 seconds, and come standard with 8MB or 32MB of memory depending on the machine. The HL-L2300 series also have duplexing built in. Our HL-2360 machine came with a starter cartridge, which is rated for 700 pages. The starter cartridge does not come with any reset gears.

There are two different toner cartridges available for these machines: the TN630 is rated for 1,200 pages, and the TN660 is rated for 2,600 pages. The drum unit, which will be covered in separate instructions, is rated for 12,000 pages. There are different part numbers for these cartridges depending on your region. They are as follows...

CARTRIDGE REGION	STANDARD	HIGH YIELD	DRUM
North/South America	TN630	TN660	DR630
Europe	TN2310	TN2320	DR2300
Asia/Middle East/Africa	TN2360	TN2380	DR2355
Oceania	TN2330	TN2350	DR2325

Shown above is the toner cartridge with the developer roller cover.

CURRENT MACHINES RELEASED SO FAR FOR THIS SERIES

HL-L2300D	HL-L2320D	HL-L2340DW
HL-L2360DW	HL-L2365DW	HL-L2380DW
DCP-L2520DW	DCP-L2540DW	MFC-L2700DW
MFC-L2720DW	MFC-L2740DW	

There is a reset gear that resets the printer each time a new toner cartridge is installed. In our machine, the starter cartridge does NOT have a reset gear installed. The TN630 and the TN660 cartridges use different reset gears. The TN630 gear has one black flag, versus two white flags on the TN660. That is how the machine knows if there is a low yield or high yield cartridge installed. New high yield and super high yield reset gears are available so that starter cartridges can be made into high yield or a super high yield cartridge. Both the TN630 and TN660 cores are the same, so the low yield can be converted to a high yield if the proper toner fill and reset gear is used.

Reset gears serve two purposes. First they reset the printer so it knows a new toner cartridge was installed. Secondly they tell the printer which cartridge was installed. When the printer senses a new toner cartridge, the bias voltage is set to a high voltage. As the cartridge is used, the bias voltage is gradually reduced. This process is necessary because (according to Brother) a new toner cartridge has a tendency to print lightly. As the cartridge is used, the density increases. To keep the density level even throughout its life, the density bias voltage is reduced accordingly. Each time a new cartridge is installed, the bias voltage is reset to the high voltage point, and the cartridge page count is reset to zero. Since different yields would dictate different decreases in density over time, Brother uses different reset gears, which tell the printer how fast to reduce the bias voltage.

NOTE: Starting with the HL-6180 series, there were some major changes in the way the toner cartridge AND the drum cartridge works in this series. In case you missed it, we are covering the theory again...

NEW BROTHER PRINT THEORY

As with previous Brother cartridges, the waste toner is repelled off of the drum to be transferred to the toner unit, but the method of how this works is now very different.

The waste toner is still transferred to the supply chamber, and this remaining toner MUST still be completely removed from the supply chamber before adding new toner. Failure to do this will cause backgrounding. In addition to contaminating the toner cartridge, this may also contaminate the cleaning section of the drum cartridge, which in turn will contaminate the toner cartridge again. The reasons for this are explained in the following cartridge theory section...

The first new item in this engine is a paper-cleaning roller. This roller cleans off any extra paper dust before the printing process even begins. It is located just after the paper-feed rollers.

The cleaning section of the drum cartridge no longer consists of a "cleaning brush" and is now a paired system of the cleaning roller assembly and the transfer roller, but these rollers only play a minor part. The developer roller now has two functions. In addition to transferring the good toner to the OPC for printing, it now also cleans off the majority of the waste toner from the drum. This is done by a very complicated series of different electrical charges, and a series of directional changes on the drum and developer rollers. The developer roller and drum change direction, and charge four times per full drum rotation. This is such a complicated process that the printers actually have a rotation controller PCB with a microcomputer on it to control it all.

The cleaning roller cleans off any remaining toner that the developer roller did not remove. The transfer roller basically self-cleans itself of any residual toner or paper dust that might have accumulated in the printing process.

When the drum is cleaned by the transfer roller the surface potential of the drum is dropped (from 900V to about 200V). At this point the transfer roller and cleaning roller will release the waste toner to the drum. This waste toner is actually then charged by the corona wire so that the developer roller can pick it up and bring it back into the toner hopper. Both rollers release the waste toner at the same time. This was done to keep the print speed high, the power supply low, and the cost of the two rollers and cartridges down.

The drum unit also now has a small waste chamber next to the cleaning roller. The reason for this waste area is for things such as paper dust that does not transfer well. Since there is a paper-cleaning roller before the cartridges in the printer, this area in theory should stay fairly empty. The metal roller next to the cleaning roller helps keep the cleaning roller free of anything that does not transfer.

Since the developer roller now does most of the cleaning work, the condition of the roller while always important, is now much more so. If the roller has any contamination on it from the toner additives (OEM or aftermarket), it will interfere with the cleaning cycle and ghosting/backgrounding will result. If the cleaning roller gets contaminated and not cleaned properly the same problem will result. The main culprit for this used to be the charge felt. It is now the developer roller. It is very important that the developer roller be cleaned with a dedicated developer roller cleaner. Never use alcohol of any type, as this will strip the conductive coating



Since the waste toner is transferred back into the supply of the toner cartridge - once you print with a bad toner cartridge, the drum unit will become contaminated. Even when you change out the toner with a good properly recycled or new OEM cartridge, the drum unit will transfer some of the bad toner back into the good toner cartridge, which will again cause backgrounding. Both cartridges will be contaminated again - it can be a vicious circle.

The remaining "toner" in the toner cartridge, when toner low is reached, is just below the bare minimum that can maintain the proper charge level. When the "change toner" light comes on, the toner will not charge up to the proper level and will cause the backgrounding. As the toner cartridge reaches the end of its useful life, the printer senses the low charge level in the toner supply and will try to keep the charge level up. This constant charging keeps an almost "empty" cartridge from backgrounding. Once the printer cannot get the remaining toner up to the minimum charge, the "change toner" light comes on. The cartridge at this point will still be printing properly. If you were to take that same cartridge out of the machine for a few days, and then put it back in the printer without doing anything to it, the cartridge will background. This will happen because the charge level that the printer was trying so hard to keep up has dissipated, and the materials left can no longer accept a proper charge.

WHAT DOES THIS ALL MEAN?

1. Make sure that your cartridge technicians thoroughly clean out the supply chamber of the toner cartridge.
2. Clean the developer roller with an approved developer roller cleaner (NOT alcohol - that will strip off the conductive coating)
3. In the event that they forget, and you have a backgrounding cartridge. The toner must be completely cleaned out again (do not use the toner over), and NEW fresh toner MUST be installed.
4. Clean the developer roller (again) with an approved developer roller cleaner (NOT alcohol).
5. The drum unit then has to be taken apart and cleaned out with emphasis on the cleaning roller and transfer roller. This is a very simple process but very necessary once it is contaminated.


According to our tests, there will be approximately 45-50 grams of toner left when the cartridge is spent. This is normal. The toner left however, as stated above, is waste toner/paper dust only and must be thrown out or there will be backgrounding issues.

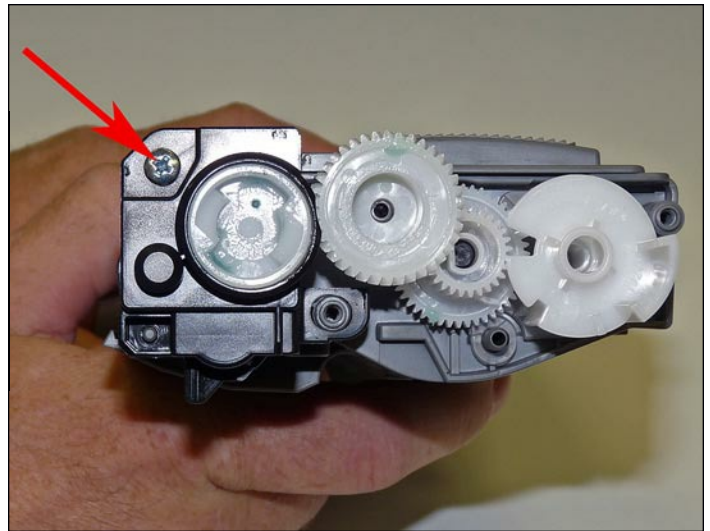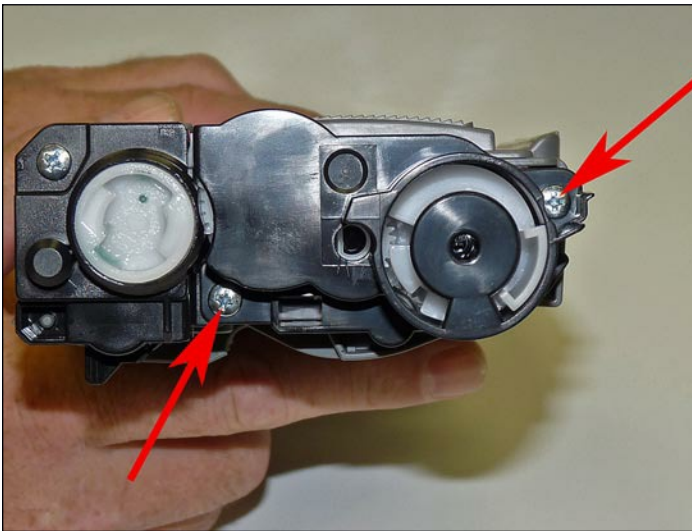


1. Vacuum the exterior of the cartridge.

2. On the gear side, remove the two screws on the large half end cap (end cap is in two separate pieces). Remove the end cap.



3. Remove the screw on the remaining smaller end cap, press in on the tab and remove the end cap.

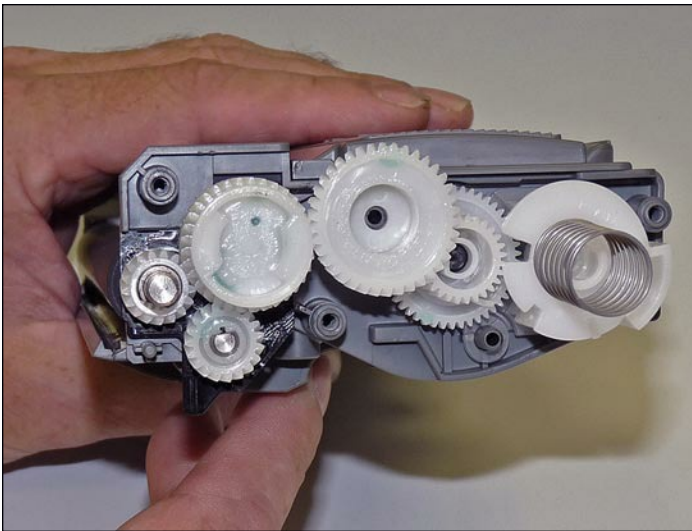

4. Remove the gears and spring as shown.

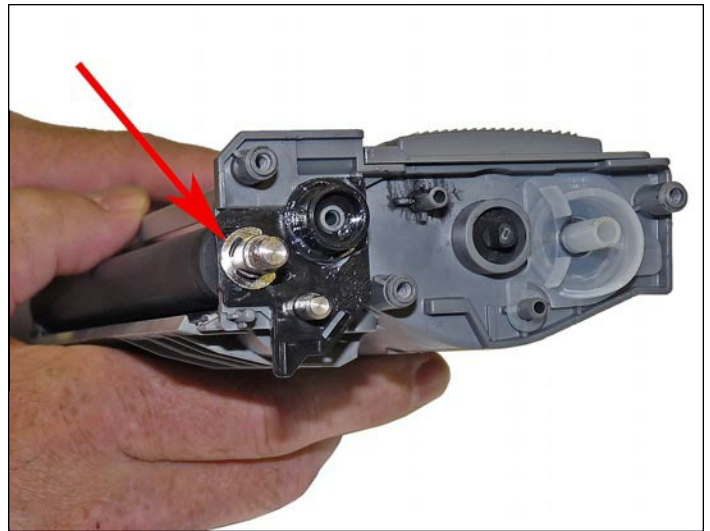




5. Remove the E-ring and the developer roller shaft.

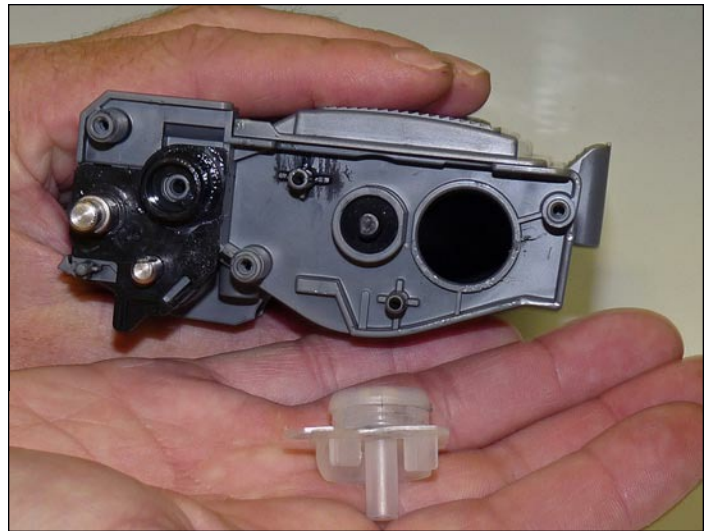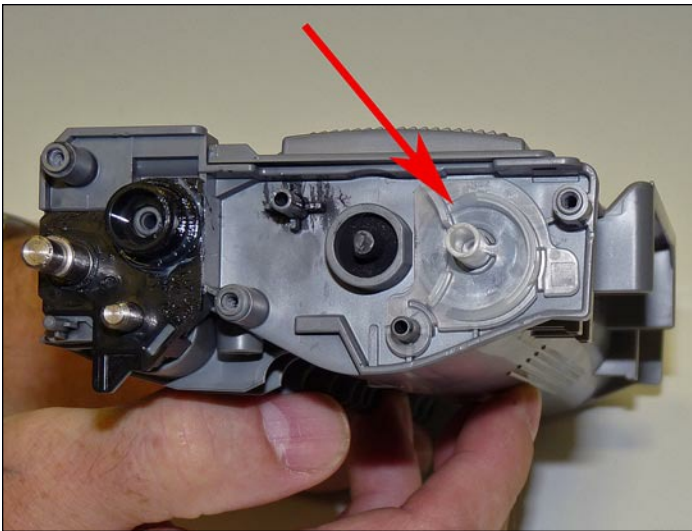


6. Remove the fill plug from the toner cartridge. Carefully pry it up from all sides.

The fill plug is very fragile and easily damaged!


Dump the remaining toner and vacuum/blow out the cartridge.

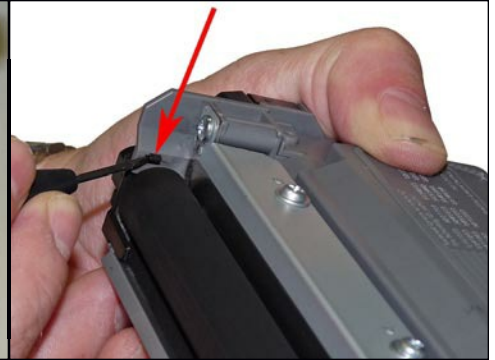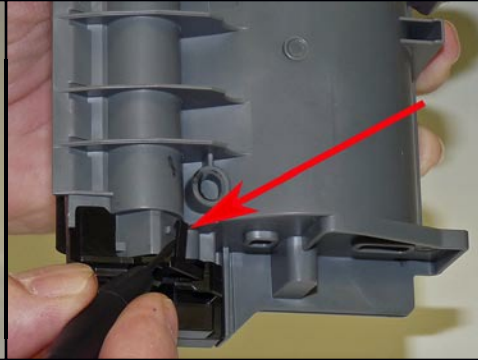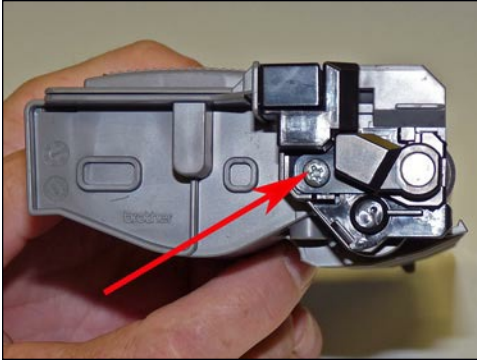


7. On the non-gear side of the developer roller, remove the screw, press in on the locking tab, and remove bushing plate.

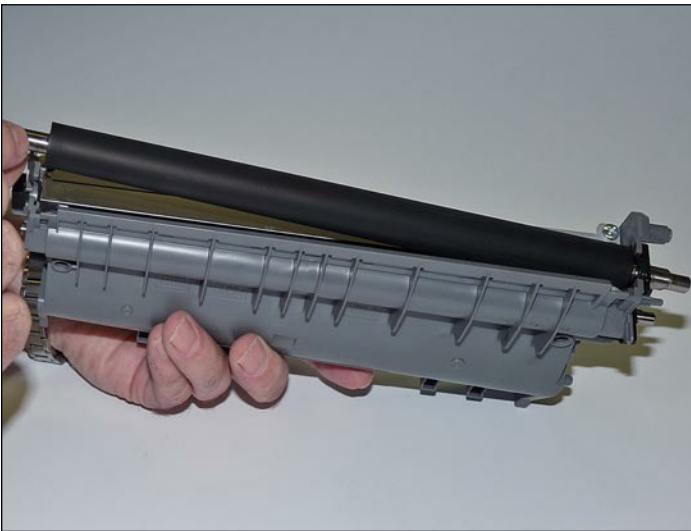

8. Remove the developer roller.

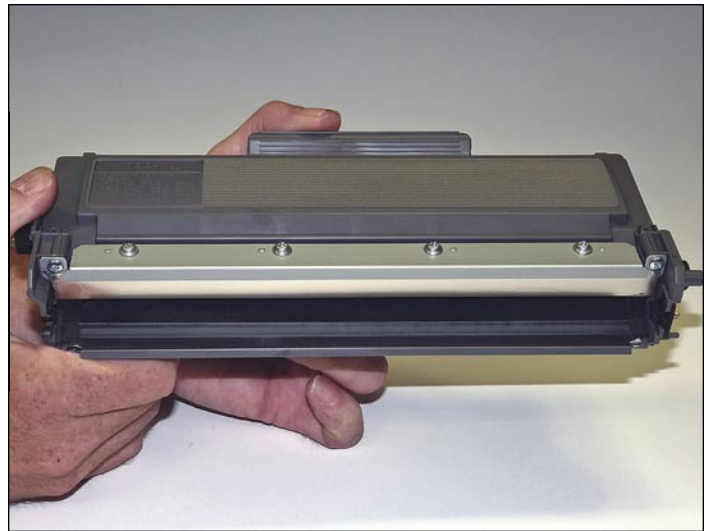

9. Clean out any remaining toner from the hopper. Pay special attention to the feed roller to make sure it is clean.

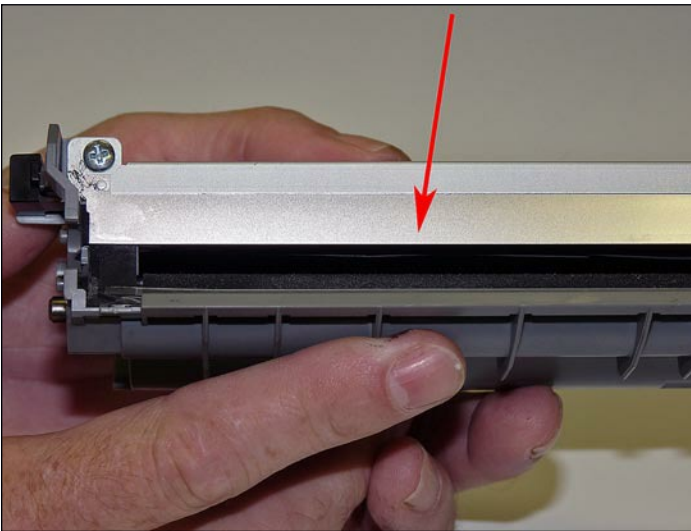

10. Vacuum the doctor blade clean. Until new blades are available, we do not recommend that the doctor blade be removed or the developer roller felt seals disturbed. The doctor blade can be easily cleaned by blowing the excess toner off, and wiping it down with a lint-free cloth. Be very careful not to leave any lint behind!




11. Inspect the magnetic roller felts. If they are compressed (shiny), rough them up with a small screwdriver.

12. Clean the developer roller with a lint free cloth and a dedicated developer roller cleaner. Do not use any chemicals other than a dedicated developer roller cleaner to clean the roller. Any type of alcohol cleaner will strip the conductive coating off the roller.




13. Re-install the developer roller with the long shaft to the gear side.

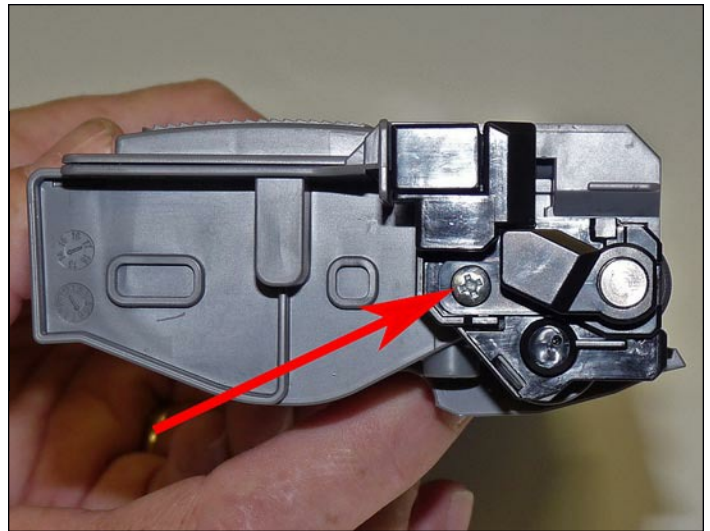


14. Install the non-gear side developer roller bushing and screw.



15. Fill the cartridge with new toner for use in the Brother HL-L2300 series of toner cartridges. Replace the fill plug.

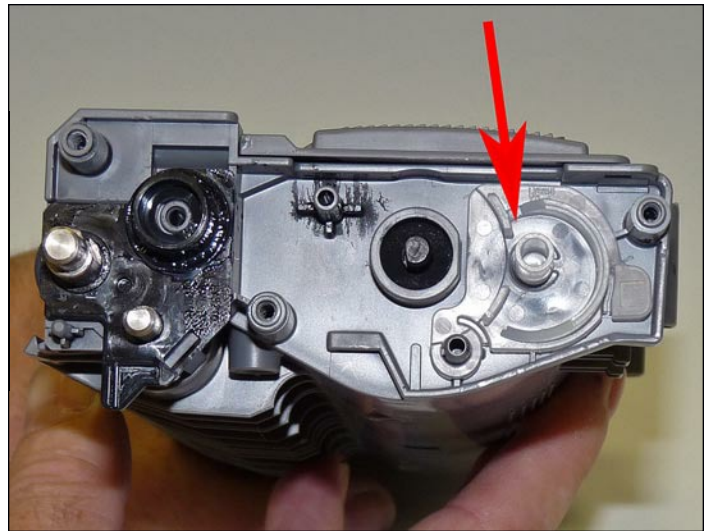


16. Clean the gears, making sure that they have no toner on them. This is a good time to also check the gear shafts to make sure there is enough grease. If the shafts appear dry, or the grease is contaminated with toner, clean the shaft and inside of the gear. Replace the grease with white lithium grease.

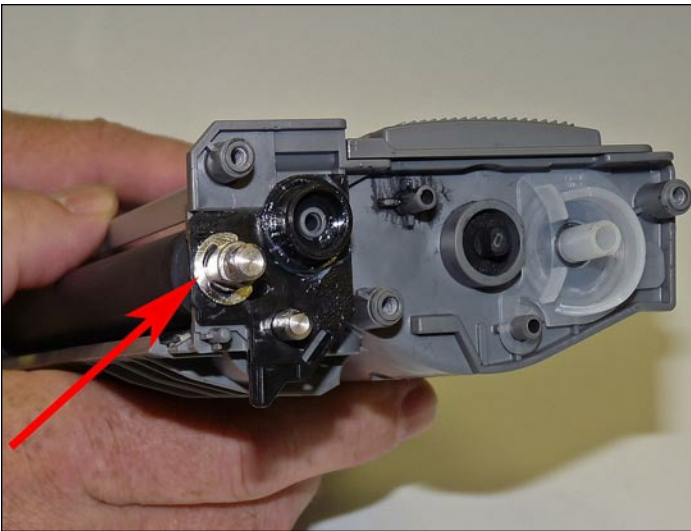


17. Install the E-ring on the developer roller shaft.

18. The cartridge we are remanufacturing is a starter cartridge and did not come with a retaining plate, reset gear, or spring.


These items need to be installed for the printer to accept a starter cartridge as new.

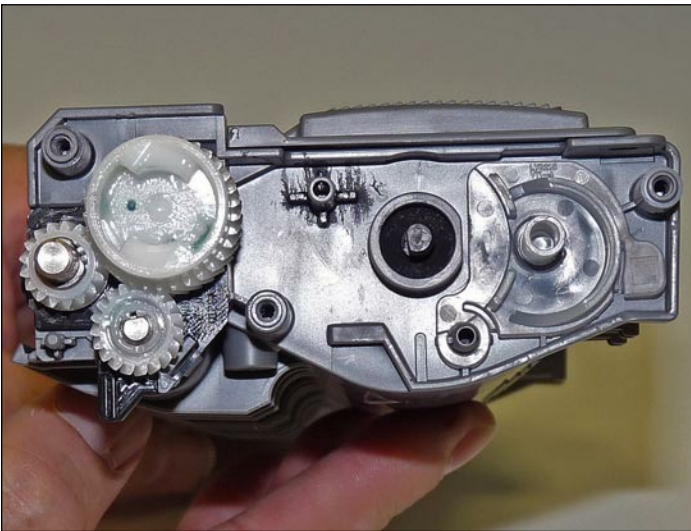

19. Install the three gears next to the developer roller.

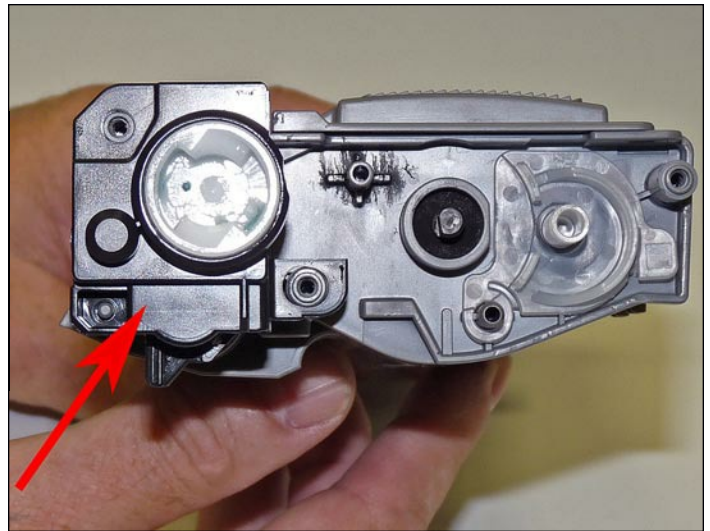

20. Install the small gear end cap.

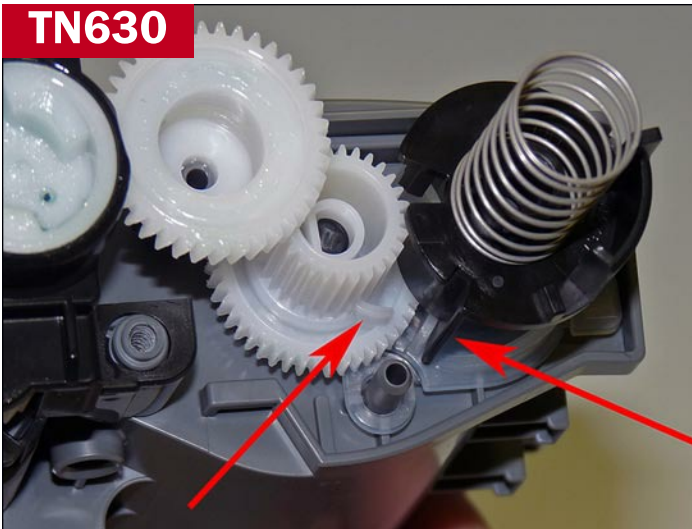

21. Depending on the cartridge you have, set the reset gears as shown.

Make sure the reset gear tab, and the tab on the retaining ring are next to each other.





22. Install the larger gear-side end cap, and three screws.



23. Wipe the cartridge down to remove any remaining toner dust. Be careful not to touch the developer roller!

24. Install the developer roller cover.