How to fill , refill , remove air for the system that have combo cartridges

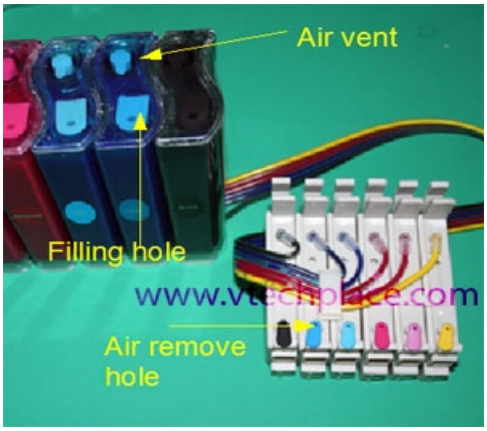

1. Remove the plugs from the filling hole and air remove hole. Please see the picture above.
If you have the empty ink system , make sure that you fill the ink reservoir first by remove the plugs on the filling hole and inject the ink there, before remove the air remove plugs.

Insert the syringe into the air remove hole where the plug was removed

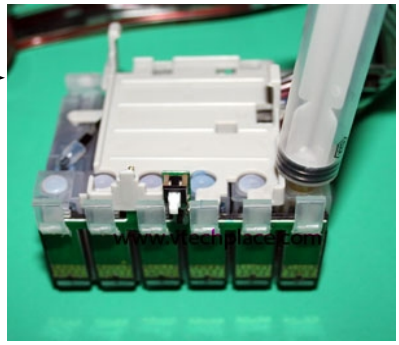

Carefully pull the plunger back. By doing this, air from the cartridge will be removed as well as some ink. As an option, the ink that gets drawn into the cartridge may be put back into the ink tank or just thrown away

Place the plug back onto the cartridge.

As an option, the ink that gets drawn into the cartridge may be put back into the ink tank or just thrown away.
Then put the plugs back into the filling hole. and do the same step for another color if need.

For more information visit us at
www.vtechplace.com or
http://support.vtechplace.com